



# The Warmup Watchdog™



## Warmup Watchdog Continuity Alarm

Don't waste time worrying about installation problems. Warmup Watchdog alerts you if damage occurs during installation.

Simply connect the wires from your heater at the beginning of the installation and leave connected until end of tiling process.. As you are installing your Warmup heater, Watchdog will sound off the moment damage occurs.



## Connecting Warmup Watchdog Alarm

- Step 1. Attach black, white and bare copper wire from heater cold lead to watchdog using the chart above.
- Step 2. Install batteries provided, into Watchdog.
- Step 3. Switch Watchdog front power switch to on position.
- Step 4. Leave Watchdog connected until ready to connect thermostat after tiling has completed.