

**CAUTION: Read all instructions carefully before installation.
Save this Installation Manual for future reference.**

GENERAL SAFETY INSTRUCTIONS

1. THIS UNIT SHOULD BE INSTALLED, OPENED, AND REPAIRED BY QUALIFIED PERSONNEL ONLY!
2. To avoid shock hazard do not open the front cover with power connected to the DS-5 or any controlled equipment.
3. To avoid fire hazard replace fuse F1 with a 1/2 Amp 250 VAC 2AG fast acting fuse ONLY.




SELECTING A MOUNTING LOCATION FOR THE DS-5

The interleaved grid on the top of the DS-5 is the precipitation sensor or “moisture grid.” The rubber “boot” protruding from the bottom of the enclosure is the temperature sensor. For reliable rain and snow detection the unit must be mounted in a location that exposes the moisture grid to a clear view of the sky. The unit should not be mounted directly under eaves or overhangs. It should not be mounted so close to the ground that it may become buried in snow. For proper temperature detection the DS-5 must be mounted outdoors, away from furnace vents, dryer vents, and other sources of heat. Note that, when powered, the DS-5 moisture grid will always remain hot. This is normal. This allows the grid to continuously melt snow and evaporate both rain and snow from the grid.

The DS-5 can be mounted by screwing the base conduit hub onto an appropriate size free-standing conduit or by using the mounting holes in each corner of the enclosure.

DO NOT DRILL HOLES THROUGH THE ENCLOSURE FOR MOUNTING! This can allow water into the enclosure causing a potential shock or fire hazard. It is recommended that a weatherproof conduit or junction box be mounted below the DS-5 for termination of the power and load pigtailed to the building wiring.

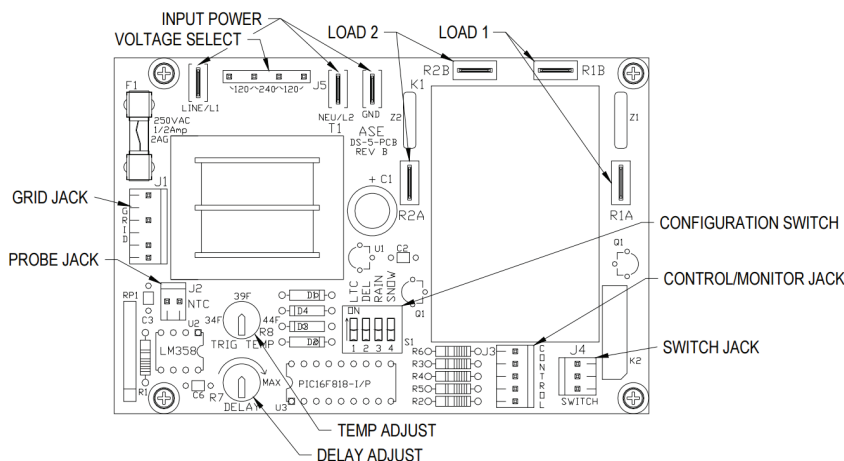


ALWAYS USE CARE WHEN REPLACING THE ENCLOSURE FRONT COVER!

Be sure the front cover gasket is not pinched or rolled. Do not overtighten the front cover screws.

VOLTAGE SELECTION, POWER & LOAD CONNECTION


The DS-5 requires a 100-120VAC or 200-240VAC power source. Install the voltage select jumpers as required. Power consumption for the DS-5 is 15 Watts, 50-60 Hz. The controlled load is switched by the load relay through the "Load" connection points. The load relay is rated for 30 Amps\240 VAC. Some wiring suggestions are provided under "Typical Load Wiring" in this manual., page 4. However, always consult local electrical codes for the wire color and size required for both power and load connections.

Applying Power with Incorrect Jumper Settings May Damage the Unit.

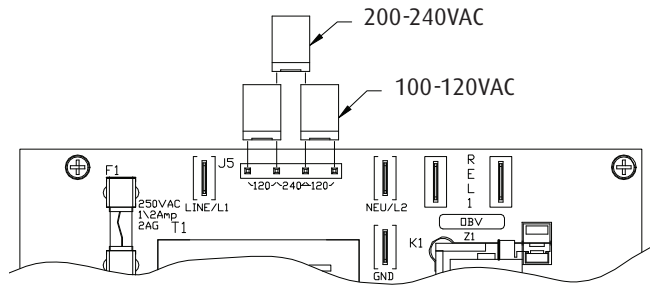


SETTING THE CONFIGURATION SWITCHES

The following table outlines the operating modes for the DS-5 and explains the functions of the adjustments. Trigger temp (**TT**) is adjustable from 34°F-44°F using the "Temp Adjust" control. When ambient air temperature (**AT**) is below this trigger point precipitation is assumed to be snow. When above this temperature, precipitation is assumed to be rain. The SNOW switch will cause the sensor to activate when snow is detected. The RAIN switch will cause the sensor to activate when rain is detected.

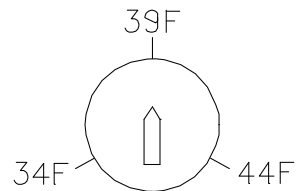

The DEL configuration switch activates the "Delay Off" drying cycle timer on the DS-5. The timer allows the DS-5 to dry the heated surface through evaporation once precipitation has stopped. The drying cycle reduces the chance of moisture left behind refreezing into ice. This timer is restarted by each precipitation detection. Therefore, the DS-5 will continue to operate as long as precipitation is detected, then for the Delay Off period once precip has stopped.

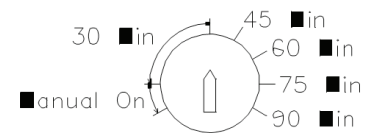


All "sensor" modes (DEL off) provide a minimum 2 minute closure to reduce cycling of an external controller. When in "controller" mode (DEL on) the Delay Off time can be adjusted from 30-90 minutes using the "Delay Adjust" control. Note the "Manual On" function at the low end of the Delay Adjust control.

The relay will close when this area is entered and open when exited. Only use the "Manual On" function for testing. **Never leave the Delay Adjust control near the "Manual On" area during normal operation.**

The Low Temperature Cutoff (LTC) option is typically used on snow melting systems with limited output capacity. If selected, the sensor will not trigger if precipitation is initially detected below 15°F. However, if the deicing system has been activated, precipitation continues, and the ambient temperature drops below 15°F, LTC will be ignored. This assures that water on the surface from melting snow will not immediately refreeze into ice as a result of deactivating the deicing system.

Refer to the following table for suggested configuration switch settings.

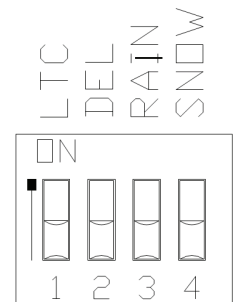

Power Must Be Cycled For Configuration Switch Changes to Take Effect.

RECOMMENDED SWITCH SETTINGS BY FUNCTION

Function	Trigger	Delay	LTC	DEL	RAIN	SNOW
Snow sensor w\o LTC	TT>AT	2 Min	OFF	OFF	OFF	ON
Snow sensor w\LTC	TT>AT>15°F	2 Min	ON	OFF	OFF	ON
Snow controller w\o LTC	TT>AT	30-90 Min	OFF	ON	OFF	ON
Snow controller w\LTC	TT>AT>15°F	30-90 Min	ON	ON	OFF	ON
Precipitation sensor	Not Used	2 Min	X	OFF	ON	ON
Precipitation controller	Not Used	30-90 Min	X	ON	ON	ON
Rain sensor	AT>TT	2 Min	X	OFF	ON	OFF
Rain controller	AT>TT	30-90 Min	X	ON	ON	OFF

X = Do Not Care

FINE ADJUSTMENT FOR EFFICIENT OPERATION

The DS-5 is shipped with the TEMP and DEL adjustments in the center position, representing 39°F (3.9°C) and 30 minutes of Delay-Off time respectively. Depending on local conditions the user may find that fine adjustment of the controls may provide more satisfactory operation. If the sensor does not trigger during very wet snows the trigger temperature may need to be adjusted higher. Conversely, if the user notices false triggers during cold rains that do not freeze, the trigger temperature may need to be lowered. The Delay-Off time can also be adjusted to provide clean melt-off without excessive running time.

Fine adjustment can both save operating expense and provide more reliable operation. However, to keep reliability high, always make adjustments in small increments.

ALWAYS USE CARE WHEN REPLACING THE ENCLOSURE FRONT COVER! BE SURE THE FRONT COVER GASKET IS NOT PINCHED OR ROLLED. DO NOT OVERTIGHTEN THE FRONT COVER SCREWS.

MANUAL OVERRIDE SWITCH OPERATION

An override switch mounted on the side is provided for testing and special operational requirements. Placing the switch in the "Automatic" position will allow the sensor to operate normally, activating the controlled equipment as needed. Placing the switch in "Manual On" will close the load relay, activating the controlled equipment. The "Standby/Reset" position prohibits triggering of the unit, clears any active delay timer, and opens the load relay. In order to reduce excessive runtime for the heater the "Manual On" mode will remain in effect for a maximum of 40 hours, then return to "Automatic" mode even if the switch is still in the "Manual On" position. You may put the DS-5 back into "Manual On" mode by switching to "Automatic", then back to "Manual On". This will restart the 40 hour timer.

If the override switch is placed in "Manual On" for less than 2 seconds, then switched back to "Automatic" the controller will execute one delay off cycle. This can be used to clear a frost or hail buildup without the danger of leaving the system in a continuous "Manual On" condition. "Standby/Reset" can still be used to clear this delay off cycle.


TYPICAL LOAD WIRING

The load lead sets of the DS-5 do not supply power directly to your load!

The relay inside the DS-5, like a switch or thermostat, is used to switch a voltage of your choice. While not as convenient as directly supplying power for the load this allows you to operate the DS-5 from one voltage while controlling a load of a different voltage without adding an external relay or contactor.

For example, the DS-5 can be powered from 120VAC but can directly control a 24VAC signal for a boiler system or 240VAC for heating wire. The following diagram shows a possible wiring scheme for connecting the DS-5 to your load.

Your load may be a direct connection to a heater, a contactor coil, or a control voltage. For clarity the safety GROUND leads are not shown.

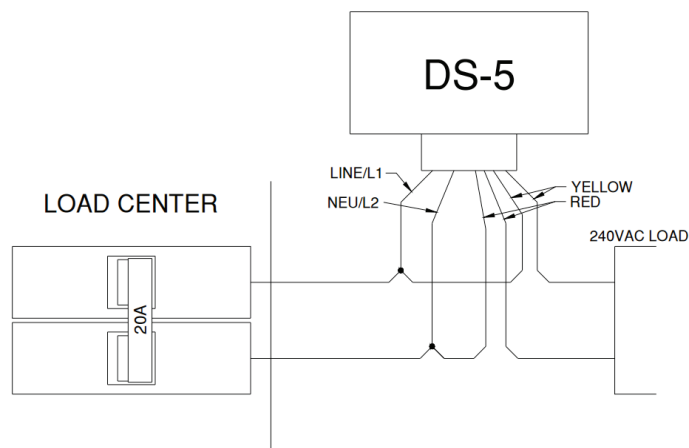

240VAC In, 240VAC Load, Heat Cable or Similar (Strap DS-5 for 240VAC Power)

EXTERNAL CONTROL/MONITOR OPERATION

An external control/monitor jack is provided on the DS-5.

Connecting Black to White will activate the "Manual On" function.

Connecting Green to White will activate the "Standby/Reset" function.

The Red/Orange leads are connected to an internal low power monitor relay.

This relay, rated at 24 VAC/VDC at 400 ma, will close with the load relay and can be used to externally monitor activation of the sensor.

Pin	Color	Function
1	Green	Standby/Reset
2	Black	Manual On
3	Orange	Deice On Mon
4	Red	Deice On Mon
5	White	Return

MOISTURE GRID MAINTENANCE & REPLACEMENT

It is recommended that the DS-5 be powered down and the grid wiped clean with clear water at least once every 4 months. Heavy deposits may be removed using Scotch-Brite™ or equivalent. However, after a number of years, the corrosive elements left behind when water is evaporated out of the moisture grid will eventually damage the grid rings. The moisture grid can be easily replaced by ordering and installing a "Moisture Grid Assembly" and following the procedure below:

THIS PROCEDURE SHOULD ONLY BE PERFORMED BY QUALIFIED PERSONNEL!

- Open all power and load breakers connected to the DS-5.
- Open the front cover and remove the cable from the Grid Jack.
- While holding the reducing bushing, unscrew and remove the old moisture grid.
- Install the supplied thread sealing tape, place the new grid into the top hole and screw the assembly into the reducing bushing.
- Tighten the grid hand tight plus ¼ turn.
- Reconnect the new cable to the Grid Jack.
- Confirm that the four connector pins are properly aligned with the jack.
- Close the front cover, confirming that the front cover gasket is properly sealed.
- Reapply power.

ALWAYS USE CARE WHEN REPLACING THE ENCLOSURE FRONT COVER! Be sure the front cover gasket is not pinched or rolled. Do not overtighten the front cover screws.

PRESEASON SNOW DETECTION TESTING

It is always a good idea to test the operation of the DS-5 prior to the winter season. Procure some clean water and, if the outdoor temperature is above the trigger point, a can of spray component cooler. Clean the moisture grid following the procedure outlined above and allow it to dry. Apply power to the DS-5 and drip some of the water onto the moisture grid, and then spray the temperature sensor protruding from the base of the enclosure with the component cooler. Once the temperature sensor has reached the trigger point with water still present on the grid the DS-5 will activate. The user should hear the internal control relay close. Proper operation has been confirmed. Allow the grid to dry completely. To clear the Delay-Off timer place the override switch into "Standby/Reset", and then back to the "Automatic" position.



The world's **best-selling** electric floor heating brand¹

DS-5 RAIN/SNOW SENSOR CONTROLLER INSTALLATION INSTRUCTIONS

LIMITED WARRANTY

The DS-5 is warranted against defects in workmanship and materials for two years from date of sale. This warranty does not apply to damage resulting from accident, misuse, or alteration nor where connected voltage is more than 5% above the configured operating voltage, nor to equipment improperly installed or wired or maintained in violation of this Owner's Manual. No other written or oral warranty applies. No employee, agent, dealer or other person is authorized to give any warranties on behalf of Warmup.

The customer shall be responsible for all costs incurred in the removal or reinstallation and shipping of the product for repairs. Within the limitations of this warranty, inoperative units should be returned, freight prepaid, to Warmup, and we will repair or replace, at our option, at no charge to you with return freight

paid by Warmup. It is agreed that such repair or replacement is the exclusive remedy available from Warmup and that Warmup IS NOT RESPONSIBLE FOR DAMAGES OF ANY KIND, INCLUDING INCIDENTAL AND CONSEQUENTIAL DAMAGE.

Some states do not allow the exclusion or limitation of incidental or consequential damages so the above exclusion may not apply to you. The warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Need Indoor Monitoring & Control?



Simple Installation & Operation at a Competitive Price. Ask Warmup about the CDP-2, a remote for the DS controllers or visit www.warmup.com

WARMUP INC.
USA: us@warmup.com
Tel.: 1-888-927-6333
www.warmup.com

CANADA: ca@warmup.com
Tel.: 1-888-592-7687
www.warmup.ca



The world's **best-selling** electric floor heating brandTM